

Warranties

FIVE YEAR LIMITED WARRANTY FOR METAL FRAME & CONSTRUCTION

Stoll Fireplace, Inc. warrants this product to the original retail purchaser against defects in the metal materials and workmanship for a period of five years from date of the original retail purchase. Stoll Fireplace, Inc. will replace, at no charge to the original retail purchaser, any part that fails due to a defect in materials or workmanship.

This warranty covers only parts and applies only to products purchased for consumer use. This warranty does not cover damage which occurs in transit or results from alteration, accident, misuse, abuse, or improper installation. It also makes no warranty as to maximum temperature and stresses which may cause discoloration of the brass. Stoll Fireplace, Inc. shall not be liable for consequential or indirect damages which are caused by defects in its product, by its repair or replacement. Some states do not allow the exclusion or limitation of incidental or consequential damages. In such cases, the exclusion or limitation may not apply.

The implied warranties of merchantability and fitness for a particular purpose which may arise under state law are also limited in duration to five years from the original purchase of this product. Some states do not allow such limitations, in which case this limitation may not apply.

ONE YEAR LIMITED WARRANTY FOR GLASS & ELECTRONICS

Stoll Fireplace, Inc. warrants this product to the original retail purchaser against manufacturing defects in the glass and electronics (*switches, motor, cord*) for a period of one year from date of the original retail purchase. Stoll Fireplace, Inc. will replace, at no charge to the original retail purchaser, any part that fails due to a manufacturing defect.

This warranty covers only parts and applies only to products purchased for consumer use. This warranty does not cover any damage which occurs in transit or results from alteration, accident, misuse, abuse, or improper installation. Neither does it cover glass damaged due to extreme heat, puncture, or other abuse; or damage to electronics due to faulty site wiring, incorrect installation, or extreme heat. Stoll Fireplace, Inc. shall not be liable for consequential or indirect damages which are caused by defects in its product, by its repair or replacement. Some states do not allow the exclusion or limitation of incidental or consequential damages. In such cases, the exclusion or limitation may not apply.

The implied warranties of merchantability and fitness for a particular purpose which may arise under state law are also limited in duration to one year from the original purchase of this product. Some states do not allow such limitations, in which case this limitation may not apply.

If you need to take advantage of these limited warranties during the warranted period, simply bring the part to your Stoll Fireplace, Inc. dealer for adjustment. Proof of the original purchase date will be required in order for you to take advantage of the limited warranty.

If you have questions or problems with your warranties, please contact us.

Stoll Fireplace, Inc | 153 Hwy. 201 | Abbeville, SC 29620
800-421-0771 | www.stollfireplaceinc.com

Heat Champion Details

Model	Fits Openings	Finished Size	Depth	Back Height	Back Width
Large Unit	39.5"- 43" wide 29"- 33" high	44" width 35" center, 33" side height	18" or 20"	16"	30" or 31"
Small Unit	36"- 39.5" wide 27"- 31" high	40" width 33" center, 31" side height	18" or 20"	16"	26" or 27"



Heat Champion

Wood fired.....Economy driven.



Blacksmith Model



Standard Model

Owners Manual

- Parts List, Installation, Operating Instructions, Warranties -



Parts List

- 1 - Heat Champion unit
- 1 - 200 CFM Blower
- 1 - Internal Thermostatic Switch
- 1 - 6' Cord
- 1 - Variable Speed Switch
- 1 - Bypass Toggle Switch
- 1 - Insulation Kit
- Cabinet Mesh Doors
- Pyro Ceramic Glass
- Top Lintel Clamp System
- Stainless Steel Grill (*optional*)
- Swinging Pot Holder (*optional*)

Installation

- Incorrect installation or unheeded warnings could result in a serious fire, and loss of life and property.
- Product is **NOT** designed for installation in “zero-clearance” fireboxes or mobile homes, or in conjunction with gas log sets.
- Inspect the chimney flue and fireplace for loose mortar, damaged brick, and creosote build-up. Contact a professional chimney sweep or building contractor for more information or repair.
- Slide unit into fireplace opening, making sure to center unit in the opening. Make sure insulation is properly installed; covering all gaps without being bunched up. Note that large gaps created by rough openings may require additional insulation.
- Install the 2 Lintel Clamp Bolts at the top and tighten as needed.
- Route the blower cord to desired location. Plug in the cord and check for proper blower operation. See “Blower” section in Operating Instructions for explanation of switches.

Operating Instructions

Fuel:

- **WARNING:** Never use gasoline, oil, or any other flammable liquid to start a fire in the Heat Champion!
- Dry, seasoned hardwood is the safest and most efficient firewood. Recommended firewood age is 6-9 months.
- When wood is green and/or burned very slowly, it produces tar and other organic vapors, which combine with expelled moisture to form creosote. This creosote residue accumulates on the flue lining, and when ignited, can start an extremely hot chimney fire. The chimney should be inspected for creosote build-up twice monthly during the heating season, and cleaned as necessary.
- Make certain to keep wood well back from the door opening in order to avoid puncturing or placing extreme heat on the glass.
- Regulate the fire in order to avoid the dangers and unnecessary wear associated with extreme heat and uncontrolled burning.
- Ashes should be placed in a metal container with a tight fitting lid and retained there until all cinders have thoroughly cooled. Remember that bottom, sides, and handles of container may be very hot.

Burning:

- The smell of burnt or curing paint is normal during the first few uses.
- Always keep screen/mesh doors closed while burning.
- Keep hot embers well back from the doors in order to protect glass.
- Blower should be on while burning. In event of power failure, only burn unit with doors open.

Blower:

- Blower is operated by variable speed switch. To turn on, turn switch clockwise until desired fan speed is achieved. To turn off, turn switch counter-clockwise until a positive “click” is heard. Unit is also equipped with a thermostatically controlled switch which turns blower off when temperature drops below 90°F. Bypass toggle switch bypasses the thermostatically controlled switch for manual control.
- **WARNING:** Disconnect power source prior to performing any maintenance or diagnostic operation on the blower or switches!

Glass:

- Always exercise caution during refueling to avoid striking the glass. Close the doors gently and make sure wood is clear from door opening.
- Glass panels should never be cleaned while they are hot. Once completely cool, the glass panels may be cleaned with a soft, damp cloth, glass cleaner, or oven cleaner purchased from your local fireplace shop. The glass panels must not be cleaned with abrasive materials (*like steel wool*) as this may scratch and weaken the glass.

Cooking:

- It is recommended that you remove the grill and/or the pot holder from the cooking chamber when not in use.
- Prepare food for cooking on a grill prior to placing food in the cooking chamber. This may include wrapping food in aluminum foil, placing food in a pot or pan, or arranging food on grill in a proper direction.
- Turn down blower before opening cooking chamber door.
- **WARNING:** Doors, grill, foil, pot/pan, and food may be extremely hot!

Front View:

